HERMETICA

/ HERMETICA SERIES 20

WIDTH 200 mm

2-3 Closures
Can be opened completely
Hinge closure: 3 screws 100 mm long
Opening closure: 2 screws 100 mm long + central screw 130 mm
PILOTO and Hold-ON Technology.



1 / NECESSARY MATERIALS



2 / MEASURES

TOLERANCES SERIE 20 | BEHAVIOR WHEN INSTALLED



3 / PREPARATION OF THE PIPE SURFACE


3.1. Clean the pipe's surface where the HERMETICA will be installed.



Polish the pipe with the scraper trying to make the surface as clean and regular as possible.



3.2. Mark the position of the clamp on the pipe by centering the clamp over the repair area and leaving half the width of the clamp on each side.

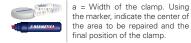

final position of the clamp.

3.3. Lubricate the pipe where the clamp will be installed: Use water and soap or vaseline suitable for food use.



Lubricate the pipe surface.



www.hermeticasf.com info@hermeticasf.com | Telf +34 968 651 751

HERMETICA

4 / CLAMP INSTALLANION

- 4.1. Opening of the HERMETICA
- The opening closure is identified by: a. Sticker "Open Here". Central Screw 30% longer with PILOTO Technology. b. Equipped with Hold-ON Technology on both shafts and screws





4.3. Positioning the casing

- 4.3.1. Position the upper casing body over the EPDM gasket.
- 4.3.2. Approach the lower casing body to start closing the HERMETICA.

CAUTION: The EPDM gasket should be placed inside the casing. The faces of the gasket must face perfectly.

a. Avoid misalignment between the faces.

b. Avoid overlapping of the faces.c. No adhesives are required.d. Do not cut the EPDM gasket.









4.2. EPDM gasket placement


The faces of the EPDM gasket must be placed head to head on any flat area of the casing, avoiding its position on the reinforcement sheet (do not make the areas marked in red coincide).

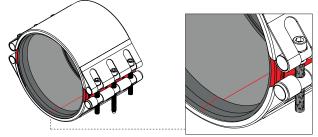


4.4. Approach and tighten the screws

4.4.1. Start the approximation of the central screw using a wrench. (Being 30% longer and equipped with the PILOTO Technology facilitates its assembly).

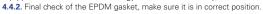

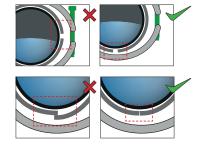

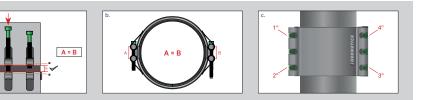

4.5. Final Adjustment with Torque Wrench

both locks

CAUTION: Tighten both closures with the central screws

approach of the closure.

a. Avoid creating angularity during the

b. Check progressively that the distance between the shafts on both sides is similar. c. Progressively tighten the side screws on

4.5.1. Use the torque wrench when there is a 20/25 mm gap between the shafts. The clamp label details the torque to be applied on N-m and Lb-inch.



4.5.6. Repeat previous steps as many times as necessary to achieve the tightening torque of all screws in a quarter turn of the wrench.



4.5.2. Tighten the central screw of one of the locks until the torque indicated by the key is reached. **4.5.3.** Tighten the lateral screws reaching the indicated torque.



4.5.4. Continue with the center screw of the opposite closure. 4.5.5. Tighten the lateral screws reaching the indicated torque.

